Chapter 03 - Practice Questions

Multiple Choice

Identify the letter of the choice that best completes the statement or answers the question.

- 1) Shifting from a high gear to a lower gear is known as
- a. riding the clutch.
- b. double clutching.
- c. speed shifting.
- d. downshifting.
 - 2) A stationary object that appears in the distance in the center of your path of travel is called
- a. a stalled vehicle.
- b. an obstacle.
- c. a point-of-view.
- d. a target.
 - 3) When starting a car with an automatic transmission, the selector lever should be in
- a. DRIVE (D).
- b. PARK (P) or NEUTRAL (N).
- c. LOW (L1 or L2, or 1 or 2).
- d. REVERSE (R).
 - 4) If your vehicle has fuel injection and the engine is cold,
- a. keep your foot off the accelerator.
- b. press the accelerator repeatedly.
- c. press the accelerator to the floor.
- d. press the accelerator to the floor once and release it.
 - 5) When stopping the car and expecting to continue again shortly, the selector lever should be in
- a. DRIVE (D).

b. REVERSE (R).

c. PARK (P).

d. NEUTRAL (N).

- 6) Driving in overdrive saves fuel and
- a. can be used in all normal reverse driving.
- b. can be used in all normal forward and reverse driving.
- c. can be used in all normal forward driving.
- d. can only be used in expressway driving.
 - 7) What should you do if the brake system warning light comes on?
- a. Gradually stop, have the vehicle towed, and have the problem corrected.
- b. Stop and add brake fluid.
- c. Stop and immediately remove the brake cable.
- d. Drive fast to a service station.
 - 8) You can make sure that warning lights are working by
- a. turning the warning light switch on.
- b. turning the ignition switch off.
- c. turning the ignition switch on.
- d. turning the light switch on.
 - 9) The last thing to do when leaving your car is to
- a. check the inside and outside mirrors.
- b. lock all doors.
- c. put the keys in your hand.
- d. glance over your left shoulder.
 - 10) When using stickshift gears, neutral is
- a. never used when the engine is running.
- b. the crossbar of the pattern.

- c. used for parking.
- d. on the top of the pattern.

11) With both inside and left-view rearview mirrors adjusted properly, the

- a. chances of a collision occurring during a lane change are eliminated.
- b. views to the rear and left are complete.
- c. the only remaining blind spot is to the left rear.
- d. right rear blind spot and smaller blind spot to the left will remain.
 - 12) Adjust a safety belt so it
- a. keeps you from leaning forward.
- b. lets you reach all door locks.
- c. fits snugly.
- d. allows comfortable movement.
 - 13) Before shifting from park to drive, you should
- a. shift into neutral and wait a second.
- b. press down on the foot-brake pedal.
- c. release the foot-brake pedal.
- d. apply the parking brake.
 - 14) Attempting to start an engine that is already running may result in
- a. warning lights being illuminated.
- b. electrical system damage.
- c. expensive starter damage.
- d. damage to the selector lever.
 - **15)** Why should you check the condition of the tires as you make an outside check of the car?
- a. You can check that tires are clean.
- b. You can determine the condition of the brakes.

- c. You can easily determine tire defects.
- d. You can check that tires look properly inflated.16) Power brakes
- a. decrease stopping distance.
- b. keep the car in place when parked.
- c. make it easier to flash brake lights.
- d. require less physical effort on the brake pedal.
 - 17) When stopping from first, second, or reverse gears,
- a. press the clutch pedal down while releasing accelerator.
- b. never tap the foot-brake pedal to signal for a stop.
- c. always shift to neutral and press the foot-brake pedal.
- d. accelerate gradually while releasing the clutch.

18) When shifting gears in a stickshift vehicle,

- a. always shift from first to second at 15 mph.
- b. always shift from third to fourth at 40 mph.
- c. there is no single correct speed for shifting.
- d. shift gears every 15 mph.
 - 19) The material you should use in the windshield washer container
- a. should be water, especially in winter.
- b. is usually a special windshield washing solution.
- c. should never be used in hot weather.
- d. is the same as for engine coolant.20) The safety belt light is
- a. off when safety belts are fastened.
- b. on when the engine is running.
- c. illuminated when safety belts are not fastened.

- d. a reminder to fasten safety belts.
 - 21) For a routine stop, which of the following would be the safest and most efficient use of your brakes?
- a. Make an easy stop over a long distance without braking.
- b. Make a firm, quick stop with rolling wheels.
- c. Flash your brake lights, then brake gradually.
- d. Gradually decrease your brake pressure as you near your stopping point.22) Which of the following statements gives the best understanding of braking?
- a. The brakes stop the car as soon as the brake pedal is depressed.
- b. Brake lights are on only when you press the brake pedal hard.
- c. It is best to decrease brake pressure gradually until the car stops.
- d. The pedal pressure should be gradual and firm to stop the car.

23) The alternator warning light indicates

- a. the alternator is working OK.
- b. the alternator is checking itself out.
- c. the alternator is too hot.
- d. trouble in the electrical system.
 - 24) The brake system warning light tells you
- a. the braking system is working properly.
- b. the parking brake has been released.
- c. the braking system is not working properly.
- d. the brakes should be applied.
 - **25)** What is the last thing you should do just before moving away from the right curb to enter traffic?
- a. Press firmly on the foot brake.
- b. Check traffic over your right shoulder.
- c. Release the parking brake.

- d. Check traffic over your left shoulder and check mirrors again.26) If leaving the car from the street side,
- a. walk around the rear of the car.
- b. walk around the front of the car.
- c. place keys where you can see them.
- d. glance over your right shoulder.
 - 27) When you turn the ignition switch to "accessory,"
- a. the key can be removed.
- b. no electrical equipment will operate.
- c. the engine will start.
- d. the radio and electrical equipment will operate.

28) When entering a car from the street side,

- a. check for traffic to the right.
- b. approach from the front of the car.
- c. hold the door open to protect yourself.
- d. approach from the back of the car.
 - 29) Riding the clutch
- a. causes needless clutch wear.
- b. allows you to shift quickly.
- c. decreases clutch wear.
- d. causes transmission damage.
 - 30) To start a warm fuel injection engine,
- a. press the accelerator to the floor once and release it.
- b. press the accelerator lightly and hold it.
- c. press the accelerator repeatedly.
- d. leave the accelerator alone.
 - 31) If there is an airbag in your vehicle's steering wheel, keep your hands at the

- a. 1 and 3 or 2 and 6 o'clock positions.
- b. 9 and 3 or 8 and 4 o'clock positions.
- c. 10 and 2 or 9 and 3 o'clock positions.
- d. 11 and 1 or 7 and 5 o'clock positions.

32) The temperature light or gauge indicates the temperature of the

- a. air inside the car.
- b. engine coolant.

c. engine oil.

d. air outside the car.

33) Where you feel the engine take hold and the vehicle start to move is called the

- a. friction point.
- b. engine discharge.
- c. blind-spot area.

d. start point.

34) Hold the steering wheel with

- a. one hand outside at the bottom and the other inside at the top.
- b. your hands on the bottom half of the wheel.
- c. your palms pointing upwards.
- d. your hands on the outside of the wheel.

35) As you are about to enter the car from the street side, you should

- a. keep the door open to defend yourself.
- b. not open the door if an oncoming vehicle is near.
- c. move from the rear of the car.
- d. face the front of the car to see oncoming traffic.36) When the ignition switch is turned to "lock,"
- a. only the steering wheel is locked.

- b. the ignition key cannot be removed.
- c. the shift lever and steering wheel are locked.
- d. all doors are locked.
 - **37**) Signal your intention to stop by
- a. holding the turn-signal lever down.
- b. turning on the emergency flasher.
- c. tapping the foot-brake pedal.
- d. holding the turn-signal lever up.
 - 38) Before entering traffic from the curb, you should
- a. check the rearview mirrors.
- b. check around the car for obstructions.
- c. check traffic ahead.
- d. check traffic ahead, in both rearview mirrors, and over your left shoulder.39) Cruise control allows the driver to
- a. avoid traffic citations for speeding violations.
- b. develop a sense of security.
- c. maintain desired speed for highway or expressway driving.
- d. control the car under all conditions.
 - 40) To indicate a right turn, move the turn-signal lever
- a. up so the lever remains on.
- b. down so the lever remains on.
- c. down with a light touch.
- d. up with a light touch.
 - 41) When you rest your foot on the clutch pedal while driving, you are
- a. tracking the clutch.
- b. guiding the clutch.

- c. riding the clutch.
- d. wearing the clutch.
 - 42) The parking brake
- a. cannot operate if the car is moving.
- b. is usually set by pushing a pedal.
- c. must be released before starting the engine.
- d. can be safely used to stop the car.
 - 43) The selector-lever position used for normal forward driving is
- a. NEUTRAL (N).
- b. LOW (L1 and L2, or 1 and 2).
- c. PARK (P).
- d. DRIVE (D).
 - 44) When stopping from higher gears in a stickshift car,
- a. keep even accelerator pressure.
- b. use brakes before depressing the clutch.
- c. first depress the clutch.
- d. first shift to NEUTRAL (N).

45) In a vehicle with automatic transmission,

- a. always come to a full stop before shifting to another gear.
- b. shift to another gear whenever needed.
- c. accelerate and then shift.
- d. slow down and then shift.
 - 46) The area to the rear of the car not seen in mirrors is
- a. not necessary for driver vision.
- b. seen by adjusting mirrors.
- c. a blind spot.

- d. directly behind the car.
 - 47) You are starting a stickshift car. Your left foot should be on the
- a. accelerator pedal.
- b. clutch pedal.
- c. brake pedal.
- d. floor.
 - 48) If the airbags are not in proper operating condition,
- a. a bell will sound.
- b. the warning light will stay on.
- c. the vehicle will come to an immediate stop.
- d. push the Reset button to correct the problem.
 - 49) What is the LAST thing you do as a check inside the car?
- a. Fasten your safety belt.
- b. Adjust the seat so you are comfortable.
- c. Adjust inside and outside mirrors.
- d. Lock all doors.
 - **50)** To activate the automatic choke
- a. press the accelerator pedal repeatedly.
- b. press the accelerator pedal halfway to the floor.
- c. do not press the accelerator pedal.
- d. press the accelerator pedal to the floor once and release it.